



Typical UHR located in overhead console.



Typical UHR located in driver's side visor.

QUESTIONS?

If your unit does not work with one of the methods described in this brochure, please visit:

www.learcar2u.com
or call 1-866-57Car2U

The representative will instruct you through the training process.

Additional home automation products are available at:
www.learcar2u.com/accessories



LGMB-01

UNIVERSAL HOME REMOTE

BROUGHT TO YOU BY LEAR CORPORATION

2007 QUICK REFERENCE GUIDE



Get Convenience. Get Control. Get Connected.

With the Car2U™ Home Automation System, and a Home Gateway Kit, your new GM car or truck can:

- open your garage door
- turn on your home stereo
- operate indoor or outdoor lighting
- activate security systems

Get 10% Off.

(any home automation accessories)

Order a Home Gateway Kit or other home automation components and save 10% off your first order.

To learn more, go to:

www.learcar2u.com/accessories

or call

866.572.2728



LGMI-01

Lear's Car2U™ System is available on the following GM 2007 model year vehicles manufactured starting after the months listed below.

Buick

Rendezvous July 2006

Cadillac

CTS October 2006
 Escalade August 2006
 Escalade EXT August 2006
 Escalade ESV August 2006
 SRX October 2006
 STS September 2006
 XLR September 2006

Chevrolet

Avalanche August 2006
 Corvette September 2006
 Impala September 2006
 Malibu July 2006
 Silverado October 2006
 Suburban August 2006
 Tahoe August 2006

GMC

Sierra October 2006
 Yukon August 2006
 Yukon XL August 2006
 Yukon Denali August 2006
 Yukon XL Denali August 2006



UNIVERSAL HOME REMOTE GUIDE

The Universal Home Remote (UHR), located on the driver's side visor or the center overhead console, can replace up to three remote control transmitter units used to operate the following types of devices:

- ▶▶ Garage Door
- ▶▶ Motorized Gates
- ▶▶ Home Automation Systems



For Your Safety: Do not use the Universal Home Remote with any garage door opener that does not have the stop and reverse features required by U.S. Federal Safety Standards. This includes any garage door opener model manufactured before April 1, 1982. When programming, do not program the system with your vehicle in the garage, and make sure people and objects are out of the way to prevent potential harm or damage. Your vehicle's engine should not be running, but the ignition should be in the "On" position.

Programming a Rolling Code Garage Door Opener

(Majority of units sold after 1996)

- 1 Press the outer two Universal Home Remote (UHR) buttons simultaneously and release them as shown in Figure 1 below.



Figure 1 (as seen in vehicle)

- 2 Place garage door opener into "learn" mode by pressing the small colored button on the back of the opener in the garage. This may require the use of a ladder; follow all safety precautions.
- 3 The LED on the garage door opener will go on immediately.
- 4 Press and hold the button on the UHR that you want to use for operation of the garage door opener.
- 5 Watch for the garage door to activate.
- 6 When the garage door activates, release the button and depress again the selected button to lock in the program.
- 7 Programming of Rolling Code garage door opener is now complete.

Programming a Fixed Code Device

(Majority of units made prior to 1996)

Below (Figure 2) is a pictorial of a typical 12-switch DIP switch layout located on your hand-held remote control under the battery cover (your remote may have 8–12 DIP switches).

Determine the fixed code on your remote:



Figure 2

| Switch position | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|----------------------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| Up, + or on | left | left | left | left | left | left | left | left | left | left | left | left |
| Middle, 0 or neutral | middle | middle | middle | middle | middle | middle | middle | middle | middle | middle | middle | middle |
| Down, - or off | right | right | right | right | right | right | right | right | right | right | right | right |

Figure 3

Record the transmitter's DIP switch settings on the chart above (Figure 3), starting with the first switch position. If the switch is in the up, + or on position, circle "left." If the switch is in the middle, 0 or neutral position, circle "middle." If the switch is in the down, - or off position, circle "right."

Program your Universal Home Remote (UHR) while in your vehicle:

- 1 Press all three UHR buttons simultaneously and release as shown (Figure 4).



Figure 4 (as seen in vehicle)

- 2 Enter your corresponding DIP switch settings into your UHR by pressing and releasing the buttons corresponding to the settings you circled in Figure 3. If "left" is circled on your chart, press the left button. If "right" is circled, press the right button.
- 3 When you are done entering all the DIP switch settings, press all three UHR buttons simultaneously and release.
- 4 Press and hold the button that you want to use for operation. Watch for the garage door to activate.
- 5 When the garage door activates release the button and depress again the selected button to lock in the program.
- 6 Programming of the Fixed Code device is now complete.

Erasing Universal Home Remote (UHR) Buttons • Press the two outer UHR buttons simultaneously and hold the buttons for approximately 20 seconds until the indicator lights begin to flash, then release the buttons.